

If your chromebook cycles to a black screen (turns on and off):

1. On a computer go to <https://www.google.com/settings/chrome/sync>
2. Log in to your school google account
3. Scroll to the bottom of the screen and click "RESET SYNC" on lower left. Then click ok.
4. On your Chromebook: Sign Out, then remove user. Then sign back in.

This will reset your bookmarks

To Reset Settings etc (solves mouse issues etc):

Step 1:

- Log in to your device and go to Settings
- Scroll to the bottom of settings - under user it will say "dashboard" with a link.
- Click on the link and scroll to the bottom of the page to **reset sync** settings

Step 2:

- Go back to the settings page and scroll to the bottom
- Click on **Advanced Settings** and scroll to the bottom and click **RESET SETTINGS**
- Sign Out. Remove User. Sign Back In.

To Remove Extensions:

1. Open Chrome
2. Click in Upper right > More Tools > Extensions
3. Click the Trashcan icon next to the Extension you want to remove
4. Click **Remove**

If your extension is a button on the browser toolbar, right lick the icon, and select Remove from Chrome.